

Product name: Zenvida Ottoman (for Adirondack Chair)


SKU: 260-0TTMN01

EMAIL:priority@zenvidahome.com

TEL: 855-349-4327 http://bit.ly/ZENVIDA



Reaching out via product review, marketplace email, social media or leaving seller feedback may cause a delay in response. If you have questions about this product or need anything, please contact us. You are our priority!






Scan here!

# \*\*\*WARNING\*\*\*

Power tools may strip bolts or screws. Hand tighten bolts to only about 75% tight. Do NOT completely tighten any bolt during assembly until all bolts and washers are connected. Having someone help you may make assembly easier.

# OWNER'S MANUAL

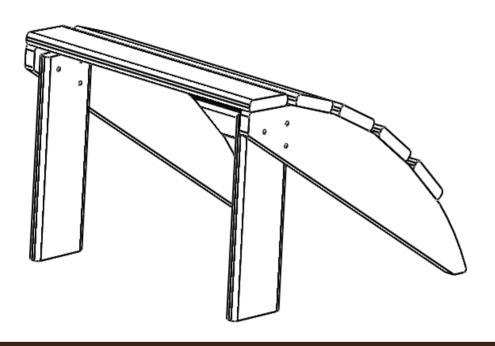

### **PRE-ASSEMBLY PREPARATION:**



#### THIS PACKAGE MAY CONTAIN SMALL ITEMS WHICH SHOULD BE KEPT AWAY FROM CHILDREN

- Please check that all parts and hardware are included before beginning assembly.
- Save all packing materials until assembly is completed to avoid accidentally discarding small parts
- Read through the preparation and assembly instructions in full before beginning assembly.
- Please use CAUTION AND CARE WHEN LIFTING the product to avoid personal injury and (or) damage to the product.
- For ease of assembly, 2 adults are recommended; Assembly time: Approximately 15 minutes.


PART LIST:	
A. Ottoman Top – 1Pc	B. Ottoman Legs-2Pcs

HARDWARE LIST:				
D. Bolts – 6 PCs		(F)Allen Wrench -1 Piece	(K) Wrench -1Piece	
		_		
G. Lock Nut - 6Pcs	H. Washer – 6Pcs			

## **ASSEMBLY STEPS:**

Attach both legs to the bottom at Ottoman by using Bolt D with Nut G and Washer H, as shown in the diagrame below.

- Do not over tight the nuts before have all the Bolts in its places.
- Then tighten up the bolt and nuts after all the Bolts in its places

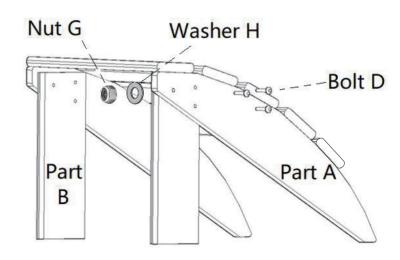

#### **Furniture care**

Routine cleaning of the furniture can be completed with only warm water and soap, while bleach may be mixed with the water (25% Bleach, 75% Water) for extra cleaning power. A stiff bristle brush can help to remove any particles from between the simulated wood grain.

1/2